
## **Product specification sheet**

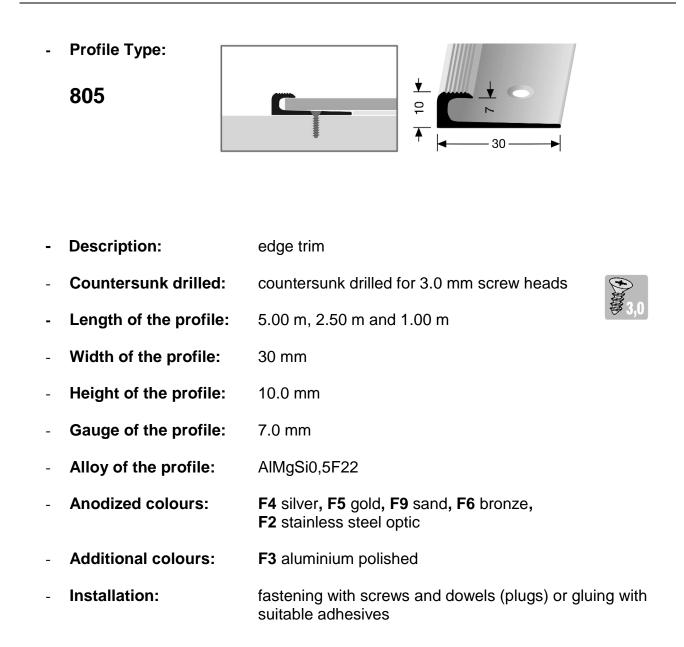



Küberit Profile Systems GmbH & Co. KG Römerweg 9 D-58513 Lüdenscheid Tel.: +49 (0) 23 51 / 95 07 - 0 Fax: +49 (0) 23 51 / 95 07 - 49 Seite/page 1 von/of 2

## **Product specification sheet**



The indicated data are typical or average values, but are not assured attributes. This product is not subject to the Construction Products Regulation.

## Installation/Laying

- 1. Ensure the surfaces to which the profile is to be fixed are clean, dry and flat.
- 2. Trim the profile to the required size.
- 3. Place the profile in position and mark the position of the screw holes onto the substrate.
- 4. Drill the substrate with a diameter of 3.0 mm to a depth of 30 35 mm and insert suitable fixing plugs into the holes.
- 5. Using countersunk screws, fix through the profile into the plugs and tighten.

For further information for the installation use our video which you find on our website <u>www.kueberit.com</u> under downloads and you find additional information in our catalogue "Küberit-Best".

Seite/page 2 von/of 2